

# ***VR6 ENGINE DOLLY***

## ***INSTALLATION INSTRUCTIONS***


***--PROFESSIONAL INSTALLATION HIGHLY SUGGESTED AND ADDITIONAL HELP--***





**IF YOU HAVE ANY QUESTIONS, COMMENTS, OR CONCERNS RELATED TO YOUR PRODUCT,  
PLEASE CONTACT US!**

**440 SPRINGBROOK ROAD. CHARLOTTE, NC 28217 | 704-559-8100  
INFO@EUROWISE.COM | WWW.EUROWISE.COM | SHOP.EUROWISE.COM**

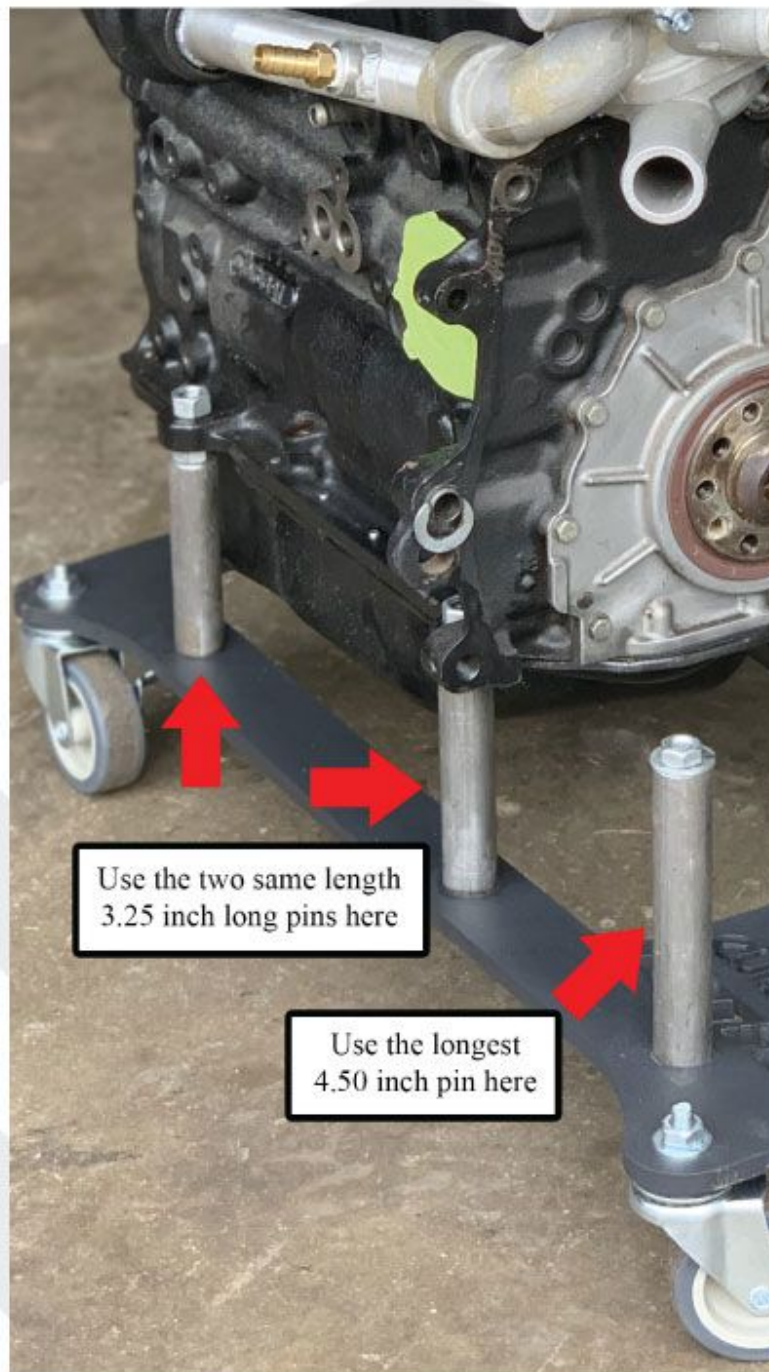

**IF YOU HAVE ANY QUESTIONS, COMMENTS, OR CONCERNS RELATED TO YOUR PRODUCT,  
PLEASE CONTACT US!**

1. The carriage bolts are installed from the bottom up. The dolly bed has square hole cutouts in them so you can't mix up the carriage bolt hols.
2. The two large squares are for the bigger carriage bolts and the single smaller bolt is for the transmission side.
3. The round hole is for the rearward part of the block. Use the provided long Hex bolt on this and install the bolt with the head facing up. The bolt rests on the head of the bolt.
4. You only need three to balance the engine on the dolly as long as you install two nuts on the front to secure it.
5. The rear transmission rests on top of the dolly so no pin is needed for the rear transmission.

**IF YOU HAVE ANY QUESTIONS, COMMENTS, OR CONCERNS RELATED TO YOUR PRODUCT,  
PLEASE CONTACT US!**